
 

 
 

 
 
 
 
 
 



 

 

 
 
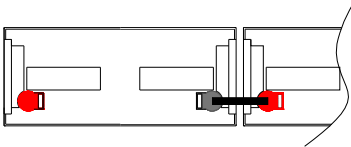
 
 
 
 

 
CONNECTIQUE STANDARD 2009

GAMME NP / SW

BATTERIE	CONNEXION <small>(1 barre cuivre étamée rigide + 2 cache bornes, sauf FIL 6/7/10 et FIL12)</small>	CONFIGURATION	
NP1-6 NP1.2-6 NP1.2-12 NP2.1-12 NP2.8-6 NP2.8-12 NP3.2-12 NP4-6 NP4-12 NP7-6 NP7-12 NP10-6 NP10-12	FIL 6/7/10 		
NPH5-12 NP7-12L NP12-6 NP12-12 NPW45-12	FIL12 		
NP17-12I	IBB17/24 		
NPC24-12 NPL24-12I SWL750	IBB17/24 		
NPC38-12 NPL38-12I SWL1100	IBB43 		
NPL65-12I SWL1850	IBB79M6 		

CONNECTIQUE STANDARD 2009

GAMME NP / SW

NPL78-12I SWL2250	IBB79/FT  (2 x CB78)		
SWL1800	IBB1800  (2 x CB65/130)		
SWL2300	IBB2300  (2 x CB65/130)		
NPL100-12	IBB100S  (2 x CABO100)		
SWL2500	IBB2500  (2 x CB65/130)		
NPL130-6I SWL1850-6	IBB130I  (2 x CB65/130)		
NPL200-6	FIL70L025CR10  (2 x CABO100)		

Pour toutes autres configurations, consulter le service technique de YUASA France Tel : 04.74.95.90.95